

## How to operate the dÄHLer Flap Control Module X

You can switch the exhaust flap to OPEN permanently and back to STOCK with the in delivery included 2-button remote control (check the two symbols).

With the OPEN function the flap stays 100% open at all times until you either close it via remote control or turn off engine. With the STOCK function the BMW control unit takes over the opening and closing again.

### Standard functions:

open < 1 sec – open flap(s)

stock < 1 sec – stock functions

### Note:

Before start you need to put the car in Comfort mode while setting up, do not use Sport mode. Carry out these settings with the remote control relatively close to the controller so that a constant signal is transmitted during the actuation time. The confirmation only takes place when the engine is running, but the settings are also saved when the engine is not running.

### X-tra feature 1- Memory Function:

You can activate the Memory Function and the device always remembers the last driver's setting even after an engine stop (OPEN or STOCK).

To activate press the close button for 5 – 7 seconds.

Flap(s) will respond by opening and closing 2 – 3 times.

The vehicle will now always start with the last selected mode.

### X-tra feature 2 - Start Setting:

You can use the remote control to specify the function in which the vehicle should start.

If you like the vehicle always to **start with flap(s) open**

Press open for 2 – 3 seconds.

If you like the vehicle always to **start in stock mode**

Press close for 2 – 3 seconds.

Flap(s) will respond by opening and closing 2 – 3 times.

The vehicle will now always start with in the selected mode.



### Other:

The in delivery included remote control can be programmed to your mirror buttons.

Scan QR Code (installation video)